

ActionCamNX Quick Start Instructions:

- Full instructions & config. tool located on camera along with other helpful info. (conn to computer)
- Charge camera via USB cable (Green LED charging) **Note:** camera should be charged every 2-3 months when not in use.
- **Buttons;** On/Off, Mode, Video
- **Take 1080 video:** press on/off button, (Steady Yellow LED) then press video button (Flashing Yellow LED indicates recording) see below.
- **Stop recording:** press video button again.
- **Take 720/60fps video:** press on/off button, (Steady Yellow LED), then press Mode Button (Steady Blue LED) then press video button (Flashing Blue LED indicates recording)
- **Take pictures:** press on/off button, (Steady Yellow LED), then press Mode Button twice (Steady Red LED) then press video button once for each picture.
- **Turn Off:** Automatic in 30sec. in Standby Mode (Steady Yellow) or press & hold On/Off button for 3-4seconds.

Note: Camera has been configured for easy on/ record, single push of On/Off button starts recording. (Flashing Yellow LED, top)

Cover & Window only required to be used in wet/messy conditions. (Avoid use in hot prolonged recording conditions)

Be aware of partial charges using laptops (Hibernating)